



H4E-0050

Portable Gas Monitor

GX-8000

User Maintenance Manual

(H4-0050)

Need of Maintenance and Servicing

This gas monitor must be maintained in a normal state at all times to prevent accidents due to gas leaks. Daily and regular maintenance is required to keep the gas monitor in a normal state. Neglecting maintenance will result in failures and false alarms.

The specified maintenance procedures must be performed for the sake of maintenance of a normal state. Also, maintenance by the manufacturer (comprehensive maintenance) should be performed in addition to these maintenance specified in this manual.

This manual complements the Operating Manual (main manual). Be sure to read and understand thoroughly both this manual and the Operating Manual including precautions to ensure proper use of this gas monitor.

RIKEN KEIKI Co.,Ltd.

2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan

Phone : +81-3-3966-1113

Fax : +81-3-3558-9110

E-mail : intdept@rikenkeiki.co.jp

Web site : <http://www.rikenkeiki.co.jp/english/>

1

Maintenance Intervals and Items

- Daily maintenance: Perform maintenance before beginning to work.
- Monthly maintenance: Perform alarm test once a month.
- Regular maintenance: Perform a maintenance once or more for every six months to maintain the performance as a safety unit.

Maintenance item	Maintenance content	Daily maintenance	Monthly maintenance	Regular maintenance
Battery level check	Check that the battery level is sufficient.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Concentration display check	Make the gas monitor draw in fresh air. Check that the concentration display value is zero (or 20.9 vol% on the oxygen deficiency meter). When the reading is incorrect, perform the zero adjustment (fresh air adjustment) after ensuring that no other gases exist around it.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Flow rate check	See the flow rate indicator to check for abnormalities.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Filter check	Check the dust filter for dust or clogging.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Alarm test	Check the alarm lamp and buzzer for normal operation by using the alarm test function.		<input type="radio"/>	<input type="radio"/>
Span adjustment	Perform the span adjustment by using the calibration gas.			<input type="radio"/>
Gas alarm check	Check the gas alarm by using the calibration gas.			<input type="radio"/>

2

Regular Maintenance Mode

Regular maintenance mode is an operation (adjustment) mode in which span adjustment and setup such as change of alarm setpoints can be performed.



WARNING

After the adjustment is completed, do not forget to return to the detection mode.
(If the gas monitor remains in the regular maintenance mode, it does not automatically return to the detection mode.)

The regular maintenance mode comes in two types: Calibration and maintenance modes. To enter the **calibration mode**, press the DISPLAY switch with the ▼ switch pressed in the detection mode and release them when the buzzer sounds. To enter the **maintenance mode**, press the POWER switch with the ▲ and ▼ switches pressed at power-on and release them when the buzzer sounds. The maintenance mode is password-protected. The input of a password is needed in the beginning.

The regular maintenance mode has the menus shown below.

Mode	Item	LCD display	Details	
Calibration mode	Fresh air adjustment	AIR CAL	Perform the fresh air adjustment.	*
	Zero adjustment for high-concentration combustible gases	VOLZ.CAL	Perform the zero adjustment for high-concentration combustible gases.	
	Simultaneous span adjustment for all channels	AUTO CAL	Perform the span adjustment simultaneously for all channels.	**
	Span adjustment for each channel	ONE CAL	Perform the span adjustment for each channel.	**
	Bump test	BUMP	Perform the bump test.	**
	Exit calibration mode	NORMAL	Exit the calibration mode and return to the detection mode.	**
Maintenance mode	Date/time setting	DATE	Set the date and time.	
	Fresh air adjustment	AIR CAL	Perform the fresh air adjustment.	*
	Zero adjustment for high-concentration combustible gases	VOL Z.CAL	Perform the zero adjustment for high-concentration combustible gases.	
	Simultaneous span adjustment for all channels	AUTO CAL	Perform the span adjustment simultaneously for all channels.	
	Span adjustment for each channel	ONE CAL	Perform the span adjustment for each channel.	
	Bump test	BUMP	Perform the bump test.	***
	Alarm setting	ALARM-P	Change the alarm setpoint value.	***
	Bump test setting	BUMP-SET	Set the bump test.	***
	Beep setting	BEEP SET	Set the confirmation beep operation.	***
	Exit maintenance mode	START	Exit the maintenance mode and enter the detection mode.	

* mark indicates items that can be operated (adjusted) in other modes such as [Detection mode] than the regular maintenance mode. Note that operation can be performed in any mode.

** mark indicates the menus in the calibration modes available in the overseas specification: AUTO CAL, ONE CAL, BUMP, and NORMAL.

*** mark indicates the items not available in the Japanese specifications.


NOTE

If any mode that is not described in this manual or Operating Manual (main manual) (any mode but the regular maintenance mode) is entered by mistake, turn off the power once and try again.

<<Calibration Mode>>


In the detection mode, keep ▼ pressed and press the DISPLAY switch. When the buzzer beeps, release the switches.

Calibration mode
AIR CAL
Perform the fresh air adjustment.

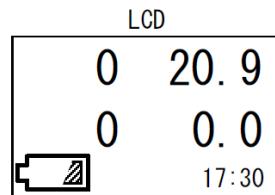


→ ENTER
Fresh air adjustment
=> P16

VOLZ.CAL
Perform the zero adjustment for high-concentration combustible gases.

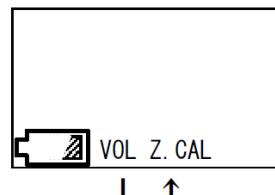


→ ENTER
Zero adjustment for high-concentration combustible gases
=> P20

AUTO CAL
Perform the span adjustment simultaneously for all channels.
(Set the span gas concentration in advance and make adjustment at once.)

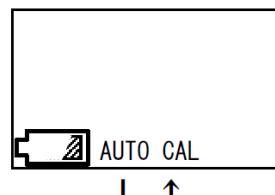


→ ENTER
Simultaneous span adjustment for all channels
=> P18

ONE CAL
Perform the span adjustment for each channel.
(While gas is supplied, perform span adjustment using UP/DOWN.)

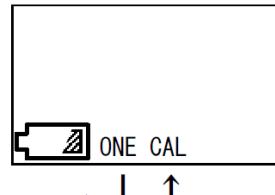


→ ENTER
Span adjustment for each channel
=> P19

BUMP
Perform the bump test.

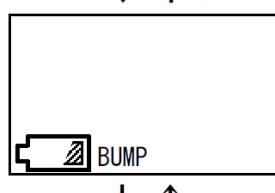

→ ENTER
Bump test
=> P6

NORMAL
Exit the calibration mode.

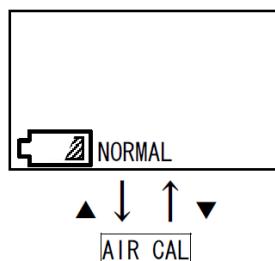

→ ENTER
Detection mode


<Bump Test "BUMP">

Required equipment/material

- Bump test gas (collected in a gas sampling bag)

Connection

Connect the equipment as shown below to perform the bump test.

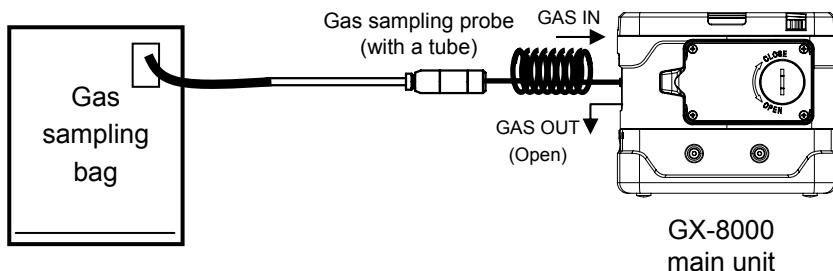

WARNING

About the bump test gas

The bump test gas is a hazardous gas (toxic, oxygen deficient, etc.). Handle the gas and related jigs and tools with due care (e.g., the gas must not be inhaled or the gas sampling bag must not have any hole).

About the place for span adjustment

- Perform span adjustment where no silicon, organic solvent, spray can gases, etc. are used.
- Perform span adjustment indoors at normal temperature without remarkable fluctuation (within ±5°C).
- Perform span adjustment in an exhaust booth.



CAUTION


The GAS OUT side of the pipe must be left open without any pipe connected. A supplied gas must be discharged to a safe place.

BUMP

Press the ENTER switch.

The bump test gas concentration is displayed.
The concentration of the prepared test gas must be consistent with the displayed test gas concentration.

To change the test gas concentration value, change the value in span adjustment menu.
The test gas concentration is set to the same value as the span gas concentration.
Simultaneous span adjustment for all channels
=> P18

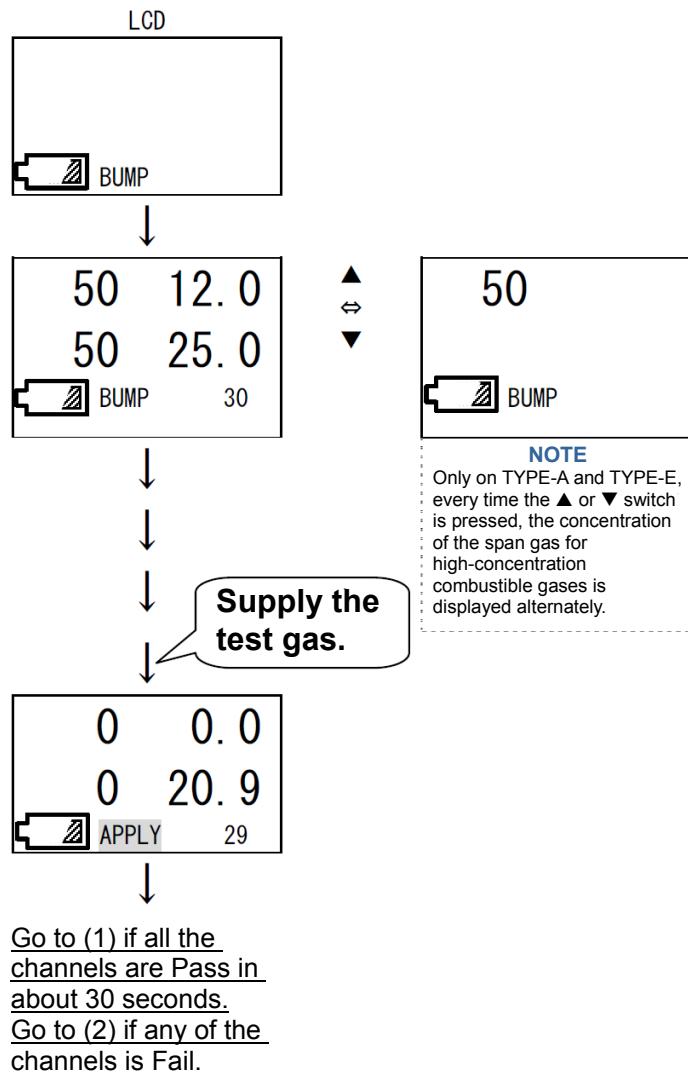

<If all the channels are Pass>


The result is displayed in about 30 seconds.
Stop supplying the gas.

The results and values are displayed alternately every time the ▲ or ▼ switch is pressed.

P: Pass, F: Fail

After checking the result, press ENTER. The gas monitor returns to the calibration mode menu.


(1)

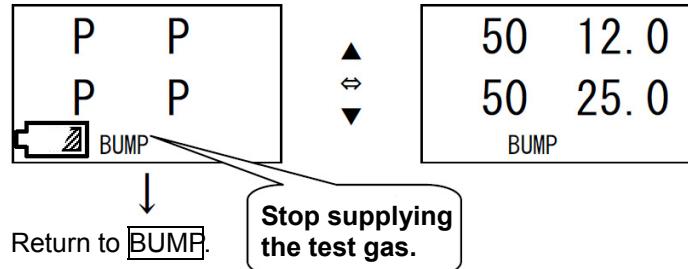Return to **BUMP**.

<If any of the channels is Fail>
 Continue supplying the gas. The result is not displayed, and the span adjustment is automatically started. CAL and APPLY are displayed alternately, and the countdown is started.

The span adjustment is started in about 30 seconds, and the result is displayed. Left: Test result, Right: Adjustment result (P: Pass, F: Fail)
 The results (P or F) <-> bump test result values <-> span adjustment result values are displayed alternately every time the ▲ or ▼ switch is pressed. Stop supplying the gas.

After checking the result, press ENTER. The gas monitor returns to the calibration mode menu.

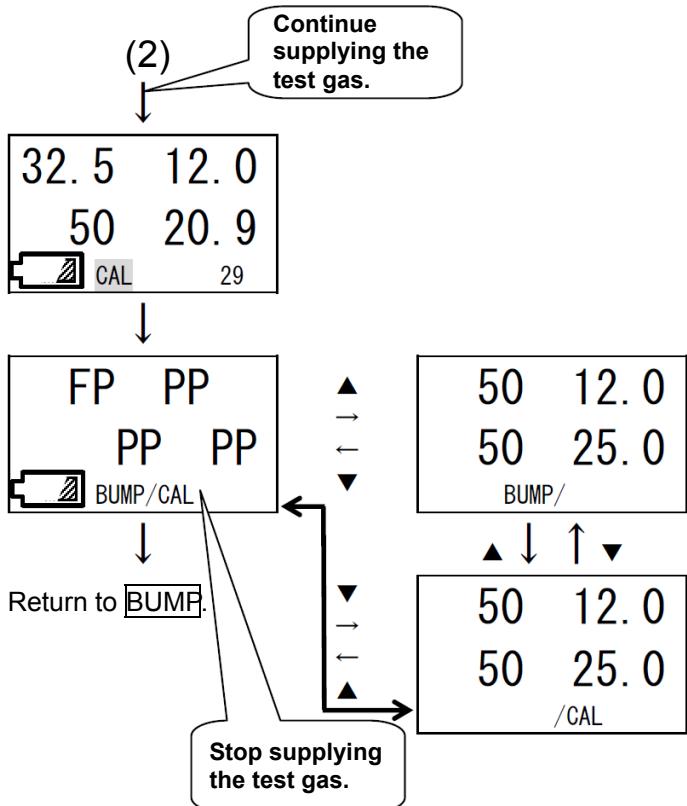

NOTE

If "F" (Fail) is displayed after the span adjustment, replace the sensor with a new one.

<<Maintenance Mode>>

The maintenance mode includes setting menus which are usually not used. Be careful not to change these settings by mistake. It is recommended that setting changes should be recorded in a log.

Keep the **▲** and **▼** switches pressed and press the POWER switch. When the buzzer beeps, release the switches.

The input field blinks. Press the **▲** or **▼** switch to select a number and press ENTER to confirm it. Enter four digits from the left.

Password: 0008

Regular maintenance mode

DATE

Set the date and time.

AIR CAL

Perform the fresh air adjustment.

VOL Z.CAL

Perform the zero adjustment for high-concentration combustible gases.

AUTO CAL


Perform the span adjustment simultaneously for all channels.

(Set the span gas concentration in advance and make adjustment at once.)

ONE CAL

Perform the span adjustment for each channel.
(While gas is supplied, perform span adjustment using UP/DOWN.)

LCD

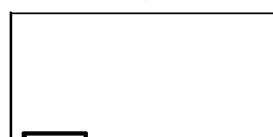


→
ENTER

Date/time setting
=> P11



→
ENTER

Fresh air
adjustment
=> P16

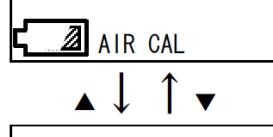


→
ENTER

Zero adjustment
for high-
concentration
combustible
gases
=> P20





→
ENTER

Simultaneous
span adjustment
for all channels
=> P18

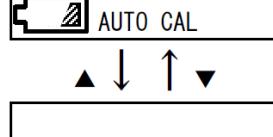

→
ENTER


Span adjustment
for each channel
=> P19

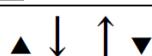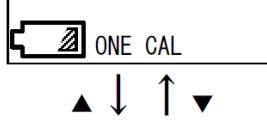

2 Regular Maintenance Mode

BUMP

Perform the bump test.

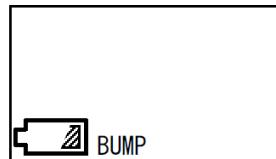


→
ENTER

Bump test
=> P6

ALARM-P

Set the alarm setpoint.

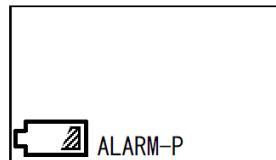


→
ENTER

Alarm setpoint
setting
=> P12

BUMP-SET

Set the bump test.

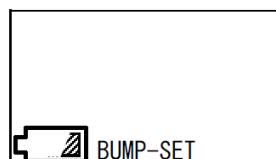

→
ENTER

Bump test
settings
=> P13

BEEP SET

Set whether or not to perform the confirmation beep operation.

Press the ▲ or ▼ switch to select ON or OFF and press the ENTER switch to confirm it.



↔
ENTER



START

Exit the maintenance mode.



→
ENTER

Press ENTER to
enter the
detection mode.

<<Date/Time Setting "DATE">>

Set the date/time.


DATE

Press the ENTER switch.

The input field blinks. Enter the year, month, day, hour, and minute in this order. Press the ▲ or ▼ switch to adjust the date and time and press the ENTER switch to enter it.

(The figure on the right shows an example of input for 2011/01/07 19:32.)

As soon as the last part (minute) is entered, the date/time setting is confirmed. After END is displayed, the gas monitor automatically returns to the maintenance mode menu.

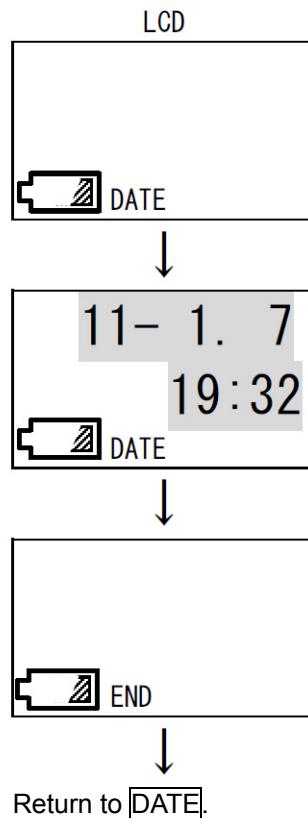

<Alarm Setpoint Setting "ALARM-P">

Set the alarm setpoint.

ALARM-P

Press the ENTER switch.

The alarm setpoint setting selection menu is displayed.

Press the ▲ or ▼ switch to display a target gas for which the alarm setpoint should be set. Every time the ▲ or ▼ switch is pressed, the target gas is changed (in the order of Combustible, O₂, H₂S, CO, and ESCAPE).


While a desired target gas is selected, press the Enter switch to cause the alarm setpoint display to blink, prompting for input.

Press the ▲ or ▼ switch to change an alarm setpoint value. Next, press the ENTER switch to enter it.

Continue to set WARNING, ALARM, STEL, and TWA in this order. (Set the STEL and TWA alarms only for CO and H₂S.)

Change the last item and press the ENTER switch. After the changed settings are confirmed and END is displayed, the gas monitor automatically returns to the alarm setpoint setting selection menu (*). Repeat the same procedure to set other target gases.

When the alarm setpoint setting is completed, press the ▲ or ▼ switch until ESCAPE is displayed. Press the ENTER switch to return to the maintenance mode menu.

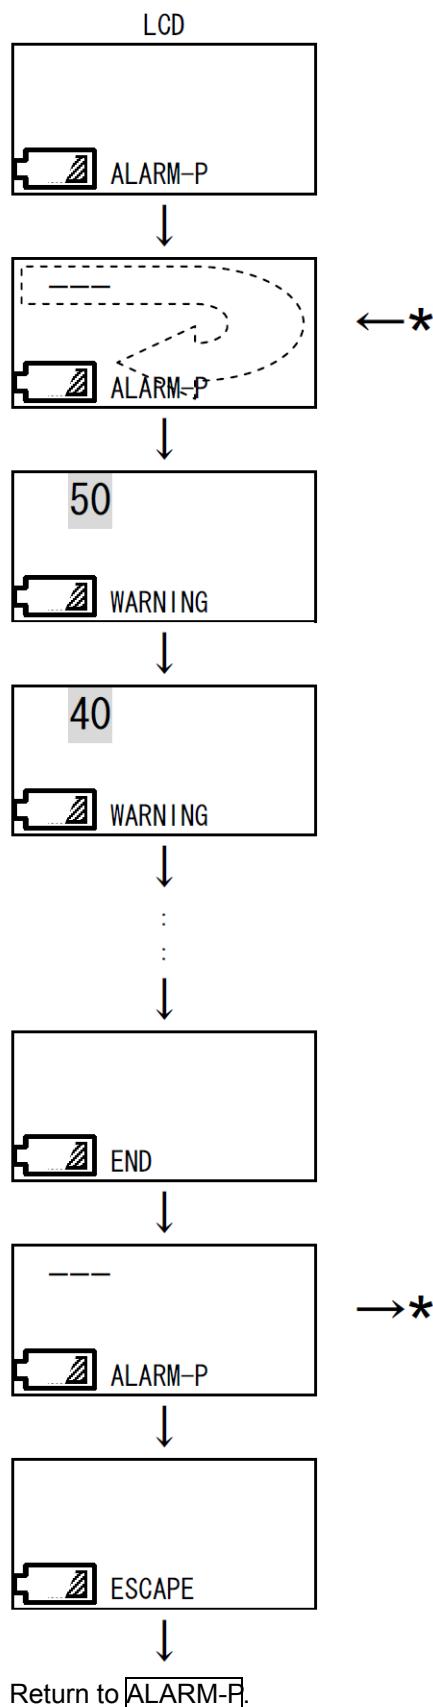

Return to **ALARM-P**.


<Bump Test Setting "BUMP-SET">

Check and set the setting items related to the bump test.

BUMP-SET

Press the ENTER switch.



Press the ▲ or ▼ switch to display a target setting item to be checked or set.

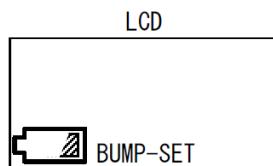

The test time is displayed.

Press the ENTER switch. The numeric display blinks, prompting for input. Press the ▲ or ▼ switch to enter introduction time. Press the ENTER switch to confirm it. The figure on the right shows an example of 30 seconds.

(Test time: 30, 45, 60, or 90 seconds)

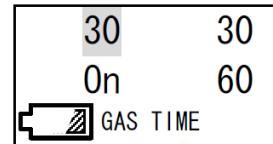
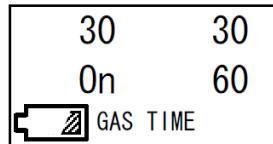


The test pass tolerance range is displayed.

Press the ENTER switch. The numeric display blinks, prompting for input. Press the ▲ or ▼ switch to enter a range. Press the ENTER switch to confirm it.



The figure on the right shows an example of range within ±30%.

(Pass range: Within ±10%, ±20%, ±30%, ±40%, or ±50%)

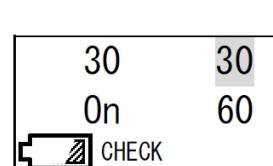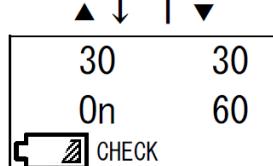



The adjustment time after test fail is displayed.

Press the ENTER switch. The numeric display blinks, prompting for input. Press the ▲ or ▼ switch to enter adjustment time. Press the ENTER switch to confirm it. The figure on the right shows an example of 60 seconds.

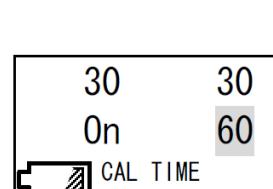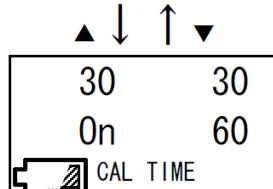


Whether or not to enable automatic adjustment after test fail is displayed.

Press the ENTER switch. The ON (OFF) display blinks, prompting for input. Press the ▲ or ▼ switch to select ON or OFF. Next, press the ENTER switch to confirm it. ON: Automatic adjustment enabled
OFF:Automatic adjustment disabled The figure on the right shows an example of ON setting.

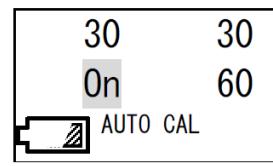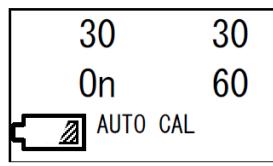

When the setting is completed, press the ▲ or ▼ switch until ESCAPE is displayed. Press the ENTER switch to return to the maintenance mode menu.

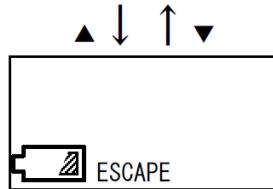

Return to **BUMP-SET**.

3

Span Adjustment


3-1. Preparation for span adjustment

Required equipment/material

- Zero adjustment gas for high-concentration combustible gases (collected in a gas sampling bag)
- Span adjustment gas (collected in a gas sampling bag)
- Stopwatch

Connection

Connect the equipment as shown below to perform the span adjustment.

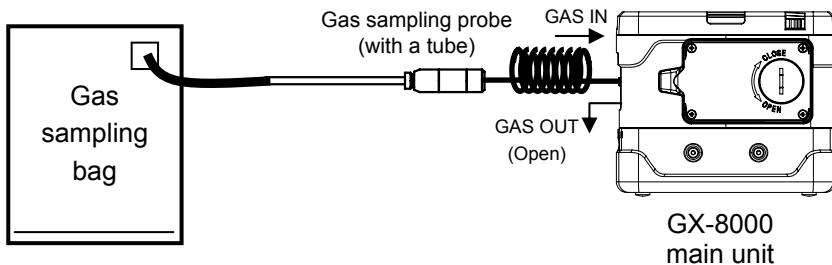

WARNING

About the span adjustment gas

The span adjustment gas is a hazardous gas (toxic, oxygen deficient, etc.). Handle the gas and related jigs and tools with due care (e.g., the gas must not be inhaled or the gas sampling bag must not have any hole).

About the place for span adjustment

- Perform span adjustment where no silicon, organic solvent, spray can gases, etc. are used.
- Perform span adjustment indoors at normal temperature without remarkable fluctuation (within $\pm 5^{\circ}\text{C}$).
- Perform span adjustment in an exhaust booth.



CAUTION

The GAS OUT side of the pipe must be left open without any pipe connected. A supplied gas must be discharged to a safe place.

<Adjustment Procedure>

Perform adjustment using the procedure shown below.

(1) Fresh air adjustment (AIR CAL) *1

Warm up the gas monitor for 60 minutes or longer before performing the fresh air adjustment to ensure more accurate adjustment.

(2) Span adjustment (AUTO CAL or ONE CAL) *1

The gases may be introduced in random order.

- Combustible gas (%LEL)
- O₂ gas *1
- CO gas
- H₂S gas

(3) Zero adjustment for high-concentration combustible gases (VOL Z.CAL) (only TYPE-A, E) *1

- N₂ gas

(4) Span adjustment for high-concentration combustible gases (AUTO CAL or ONE CAL) (only TYPE-A, E) *1

- Combustible gas (vol%)

End of span adjustment

**WARNING**

When the fresh air adjustment is performed in the atmosphere, check the atmosphere for freshness before beginning the adjustment. If other gases exist, the adjustment cannot be performed properly, thus leading to dangers when the gas leaks.

**CAUTION**

Only Type-A, E

*1 Perform adjustment in the following order: "fresh air adjustment, span adjustment, zero adjustment for high-concentration combustible gases, and span adjustment for high-concentration combustible gases."

The sensor for high-concentration combustible gases has different outputs depending on whether the base gas is air or N₂. Performing adjustment in any different order than the above adversely influences the reading taken when a combustible gas (vol%) is drawn in.

NOTE

Before starting the adjustment, let the gas monitor draw the gas and wait until the readings are stabilized.

3-2. Fresh air adjustment



WARNING


When the fresh air adjustment is performed in the atmosphere, check the atmosphere for freshness before beginning the adjustment. If other gases exist, the adjustment cannot be performed properly, thus leading to dangers when the gas leaks.

NOTE


If the existence of other gases in the atmosphere is suspected before performing the fresh air adjustment, collect fresh air in the gas sampling bag and perform the adjustment using a gas supply adapter in the same way as for the span adjustment.

AIR CAL


Press the ENTER switch.

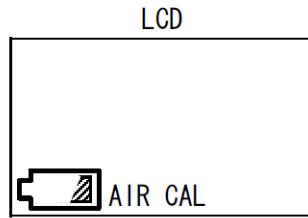

The current concentration readings of the gases are displayed. Press the AIR switch when they are stabilized.

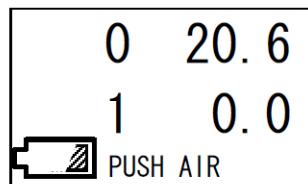


When the AIR switch is pressed, HOLD AIR is displayed. Keep pressing the switch until RELEASE is displayed.


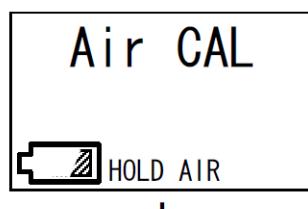


Release the AIR switch.

* Only on TYPE-A and TYPE-E, a 30-second countdown is started. No countdown is started on other types.

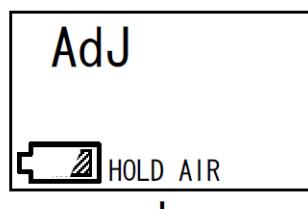

After the fresh air adjustment is successfully completed and END is displayed, the gas monitor automatically returns to the menu.

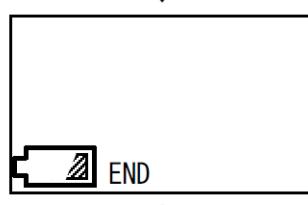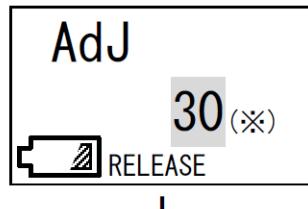Return to **AIR CAL**.

3-3. Span adjustment

<Simultaneous Span Adjustment for All Channels (AUTO CAL)>

AUTO CAL

Press the ENTER switch.

The span gas concentration is displayed.

It needs to be consistent with the concentration of the prepared span gas. To change the value, press the ▲ and DISPLAY switches simultaneously.

The span gas concentration setting menu is displayed.

Press the ▲ or ▼ switch to display a target gas for which the span gas concentration should be changed. Every time AIR is pressed, the target gas is changed (in the order of Combustible, O₂, H₂S, CO, and ESCAPE).

While a desired target gas is selected, press the ENTER switch to cause the span gas concentration display to blink, prompting for input. Press the ▲ or ▼ switch to change the span gas concentration setting.


After the ENTER switch is pressed to confirm the changed setting and END is displayed, the gas monitor automatically returns to the span gas concentration setting menu. Repeat the same procedure to set other target gases.


When all of the span gas concentration setting is completed, press the ▲ or ▼ switch until ESCAPE is displayed. Press ENTER to return to the original screen.

While the span gas concentration is displayed, press the MODE switch to cause AUTO CAL to blink and display the current concentration readings (prompting for supply). Prepare and supply the span gas.

In 60 seconds after supplying the span gas when the readings are stabilized, press the ENTER switch to perform adjustment.


After the adjustment is successfully completed and PASS is displayed, the gas monitor automatically returns to the menu. Stop supplying the gas.

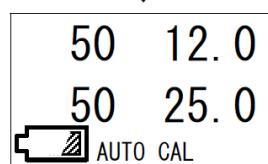

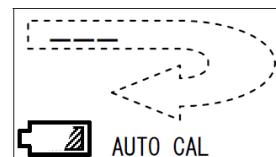

+DISPLAY


[Setting repeated for each gas]

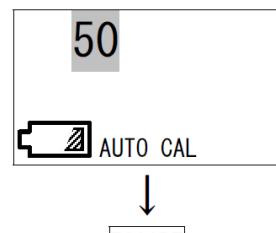


ENTER

NOTE


The changed value is saved. From next time, the changed value is displayed in the beginning.

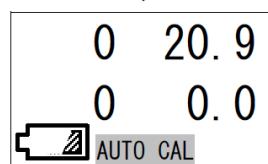

Supply the span gas.

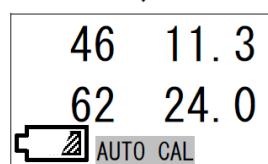

Stop supplying the span gas.

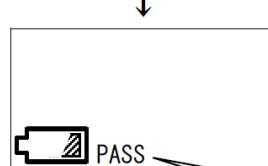

Return to AIR CAL.

ONE CAL

Press the ENTER switch.


The span adjustment selection menu is displayed. Press the ▲ or ▼ switch to display a target gas for which the span adjustment should be performed. Every time the ▲ or ▼ switch is pressed, the target gas is changed (in the order of Combustible, O₂, H₂S, CO, and ESCAPE).

While a desired target gas is selected, press the ENTER switch to cause the concentration display to blink and display the current concentration readings (prompting for supply). Prepare and supply the span gas.

In 60 seconds after supplying the span gas when the readings are stabilized, press the ▲ or ▼ switch to adjust to the gas concentration.

Press the ENTER switch to adjust it.
After END is displayed, the gas monitor automatically returns to the span adjustment for each channel menu (*). Stop supplying the gas.
Repeat the same procedure to adjust other target gases.

When all of the span adjustment is completed, press the ▲ or ▼ switch until ESCAPE is displayed. Press the ENTER switch to return to the menu.

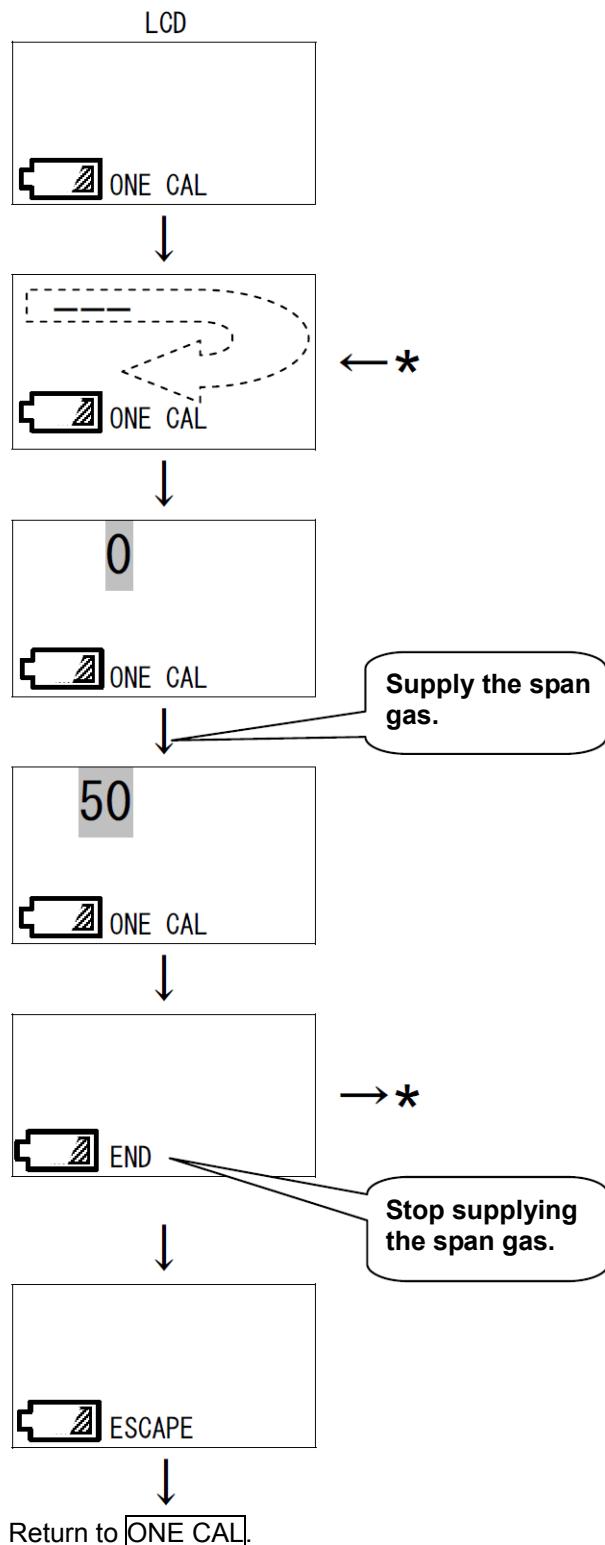

<High-concentration Combustible Gas Zero Calibration "VOLZ.CAL"> (Only TYPE-A, E)

VOL Z.CAL




Press the ENTER switch.

The VOL Z.CAL display blinks. Until the combustible gas range switches to VOL%, the combustible gas concentration is displayed as ---.



The current concentration readings of the combustible gas and oxygen are displayed (prompting for supply). Prepare and supply the zero gas.

In about 60 seconds after supplying the zero gas when the readings are stabilized, press the ENTER switch to perform adjustment.

After the zero adjustment is successfully completed and END is displayed, the gas monitor automatically returns to the menu.

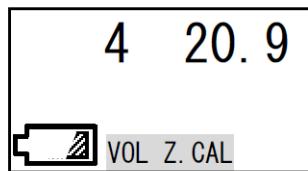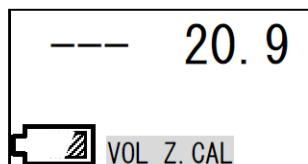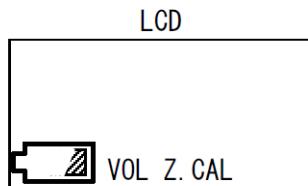

Supply the zero gas.

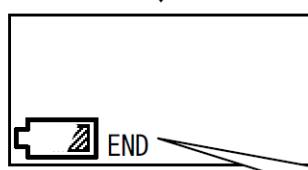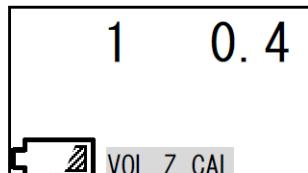

Stop supplying the zero gas.


Return to **VOL Z.CAL**

4


Replacement of Consumable Parts

<Sensor Replacement Procedure>

- (1) Loosen the four screws on the sensor cover and remove the sensor cover.
- (2) Remove the sensor rubber seal.
Take care not to damage the sensor rubber seal and the seal surface inside the sensor cover that comes into contact with the rubber seal.

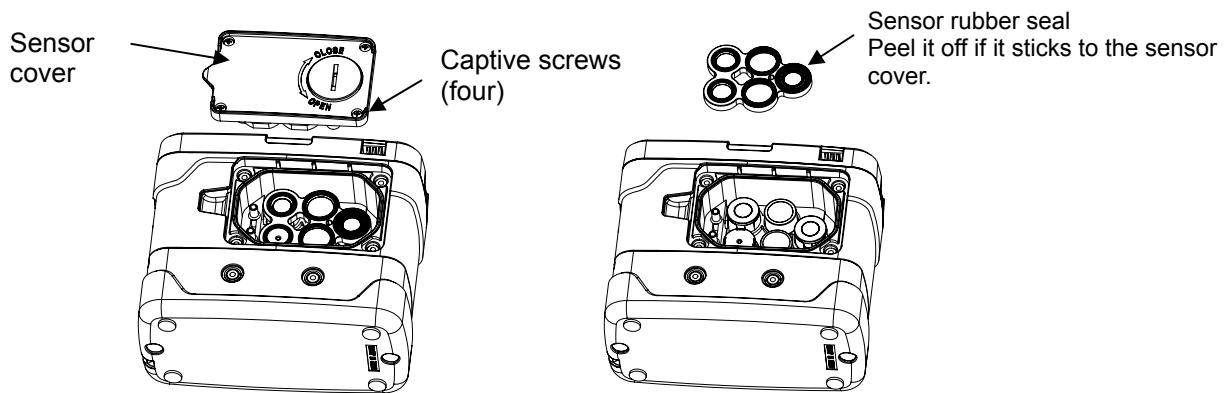


- (3) Replace the sensor.
Pay attention to the installation direction of the sensors.
Check that the pins of the sensors are inserted firmly all the way (that the sensors have equal heights).
Also, replace the rubber seals as required.
Handle the rubber seals with care because any damage on them will impair the waterproof property.

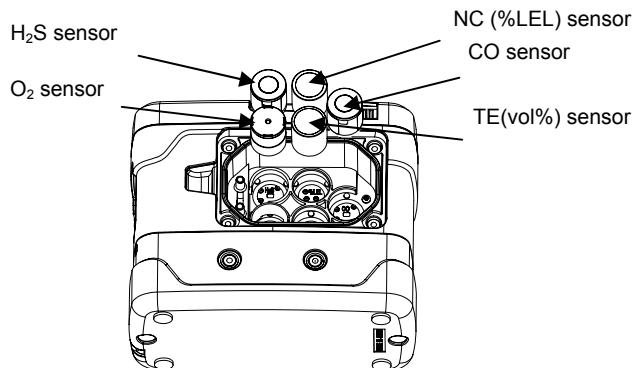

4 Replacement of Consumable Parts

- (4) Using an opposite procedure to the above, install the sensor rubber seal and fix the sensor cover.
Screw tightening torque: 5 to 5.5 kgf·cm (49 to 54 N·cm)

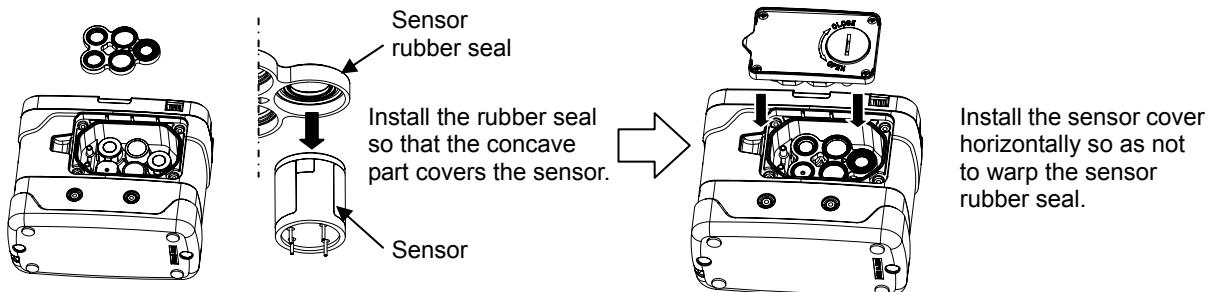

<Replacement Procedure for Other Consumable Parts>

For the stable operation of the gas monitor and safety, a qualified service engineer is required to take care of replacement of the parts that requires high expertise. Please contact RIKEN KEIKI.

Warranty Policy

RIKEN KEIKI CO., LTD., warrants gas alarm equipment sold by us to be free from defects in materials, workmanship, and performance for a period of one year from date of shipment from RIKEN KEIKI CO., LTD., Inc. Any parts found defective within that period will be repaired or replaced, at our option, free of charge. This warranty does not apply to those items which by their nature are subject to deterioration or consumption in normal service, and which must be cleaned, repaired, or replaced on a routine basis.

Warranty is voided by abuse including mechanical damage, alteration, rough handling, or repair procedures not in accordance with the operator's manual. This warranty indicates the full extent of our liability, and we are not responsible for removal or replacement costs, local repair costs, transportation costs, or contingent expenses incurred without our prior approval.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESSED OR IMPLIED, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF RIKEN KEIKI CO., LTD., INCLUDING BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL RIKEN KEIKI CO., LTD., BE LIABLE FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL LOSS OR DAMAGE OF ANY KIND CONNECTED WITH THE USE OF ITS PRODUCTS OR FAILURE OF ITS PRODUCTS TO FUNCTION OR OPERATE PROPERLY.

This warranty covers instruments and parts sold to users by authorized distributors, dealers, and representatives as appointed by RIKEN KEIKI CO., LTD.

We do not assume indemnification for any accident or damage caused by the operation of this gas monitor, and our warranty is limited to the replacement of parts or our complete goods.