

TURN ON

Status Indications

Status Light: Solid green: No instrument
 Blinking green: GX-6000 installed
 communication established
 Blinking orange: Charging
 Solid orange: Charge complete
 Solid red: Problem detected

Status Icons: GX-6000 is connected
 Unit Tab's Active box is not selected
 Cal/Bump/Alarm Check in progress
 Test Pass
 Test Failed
 GX-6000 problem detected

Install GX-6000

1. Flip the SDM-6000's power switch so that it's in the ON position.
2. Orient the GX-6000 so the belt clip is facing away from the SDM-6000. Set the bottom of the GX-6000 in the bottom of the instrument cradle and push the top of the GX-6000 toward the SDM-6000.
3. Push the red gas in/gas out cover down until it touches the GX-6000 and then release it.

Instrument Connected

The GX-6000 will turn on once the gas in/gas out cover is in place and will begin its power up sequence. The status of the instrument is shown by the Station/Instrument Indicators at the bottom of the Function Tab. The color of the corresponding indicator and the logo shown in it will indicate the status of the instrument. (see above for status icons)

BUMP TEST

Start Bump Test

1. If necessary, press the Function button in the upper left corner to get the Function Tab to appear.
2. Press the BUMP button to initiate a bump test.

If you wish to cancel the bump test, press the BUMP Cancel button in the Function Tab and press Yes in the window that appears.

Fresh Air Adjustment

The SDM-6000 will apply fresh air to the GX-6000 for the time defined by the AIR Flush bump test parameter.

If one or more of the sensors fail the fresh air adjustment, the SDM-6000 will abort the bump test and will not apply calibration gas. If this happens, the Unit Tab will indicate which channels passed and failed the fresh air adjustment. (Above is an example of an O2 channel failure)

Bump Testing

The SDM-6000 will apply calibration gas. The SDM-6000 will analyze the results after the end of each gas application.

The GX-6000 will shut off after 15 seconds if the bump test passed. If the bump test failed, the GX-6000 will shut off after 10 minutes.

Bump Test Results

Once the bump test is over, the Function Tab will display a BUMP End button.

To view the test results, press the Unit button to display the Unit Tab. The test results will display on the Unit Tab until you press the BUMP End button in the Function Tab even if the GX-6000 is turned off.

The results can be printed by pressing the Print button at the end of a bump test. (if optional printer is connected)

Remove GX-6000

1. To turn off the GX-6000 before it is automatically turned off, press the Detector Off button in the lower left corner of the Unit Tab.
2. Then push the red gas in/gas out cover toward the GX-6000 and then release it. It should return to its unused state at the top of the SDM-6000. Remove the GX-6000 from the SDM-6000.

CALIBRATION

Start Calibration

1. If necessary, press the Function button in the upper left corner to get the Function Tab to appear.
2. Press the CAL button to initiate a calibration.

If you wish to cancel the calibration, press the CAL Cancel button in the Function Tab and press Yes in the window that appears.

Fresh Air Adjustment

The SDM-6000 will apply fresh air to the GX-6000 for the time defined by the AIR Flush calibration parameter.

If one or more of the sensors fails the fresh air adjustment, the SDM-6000 will abort the calibration and will not apply calibration gas. If this happens, the Unit Tab will indicate which channels passed and failed the fresh air adjustment.

Calibration

The SDM-6000 will then apply calibration gas. The SDM-6000 will analyze the results after the end of each gas application.

The GX-6000 will shut off after 15 seconds if the calibration passed. If the calibration failed, the GX-6000 will shut off after 10 minutes.

Calibration Results

Once the calibration is over, the Function Tab will display a CAL End button.

To view the test results, press the Unit button to display the Unit Tab. The test results will display on the Unit Tab until you press the CAL End button in the Function Tab even if the GX-6000 is turned off. The results of the calibration will be stored in the SDM-6000's SD card.

The results can be printed by pressing the Print button at the end of a calibration. (if optional printer is connected)

Remove GX-6000

1. To turn off the GX-6000 before it is automatically turned off, press the Detector Off button in the lower left corner of the Unit Tab.
2. Then push the red gas in/gas out cover toward the GX-6000 and then release it. It should return to its unused state. Remove the GX-6000 from the SDM-6000.

ALARM CHECK

To perform an alarm check:

1. If necessary, press the Function button in the upper left corner to get the Function Tab to appear.
2. Press the Alarm Check button to initiate an alarm check.


The buzzer will sound, the LEDs will turn on for a few seconds, the vibrator will vibrate, and the SDM-6000 will determine if these actions were completed successfully. After the alarm check, the Function Tab will display.

To view the test results, press the Unit button to display the Unit Tab. The test results will display on the Unit Tab until you press the Alarm Check End button in the Function Tab even if the GX-6000 is turned off.

Alarm Check can be turned on for Bump or Calibration Test.



GX-6000 Calibration Station User Guide

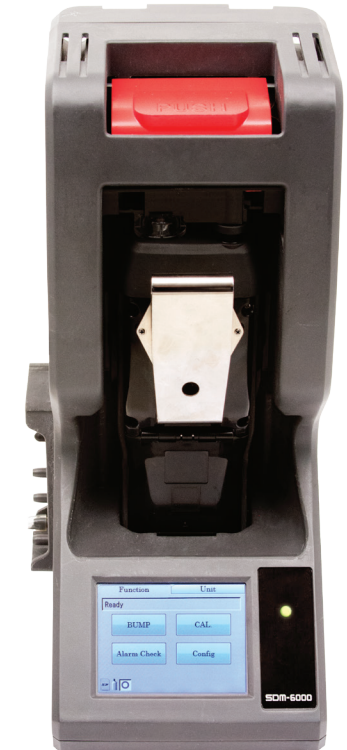

Model SDM-6000

PN 71-0404 Rev 0