


GX-3R (Pro) IrDA Reprogramming Instructions

Document Part Number: 71-0528


Revision: P1

Released: 6/4/20


1. Double click the setup.exe file for the GX-3R Program Loader and follow the installation instructions.
2. Plug your IrDA cable into your computer.
3. Double click the **GX-3R Program Loader** shortcut created on the computer desktop or navigate to the **GX-3R Program Loader** using the **Start** menu.
4. The main window appears.

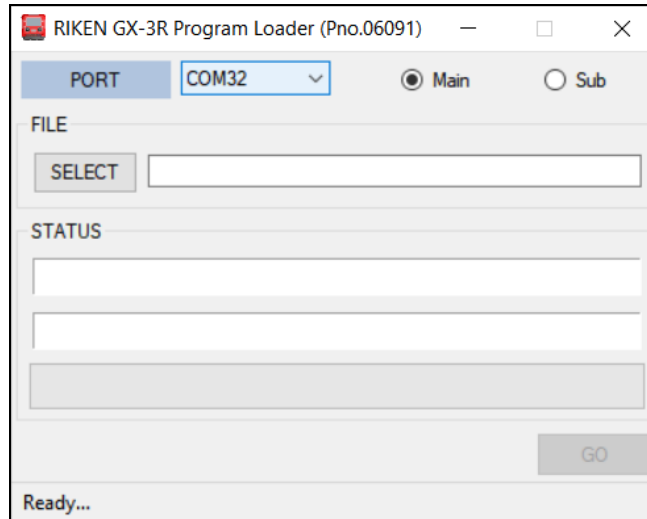

5. If necessary, select a COM port for the IrDA cable.
6. Click the **Main** radio button if it is not already selected.
7. Line up the GX-3R (Pro)'s infrared port with the IrDA cable.
8. Turn on the GX-3R (Pro).
9. When the GX-3R (Pro) is connected, the GX-3R (Pro)'s screen will say **IrDA TRANSMIT** and the bottom left corner of the Program Loader window will say **ON Line**.

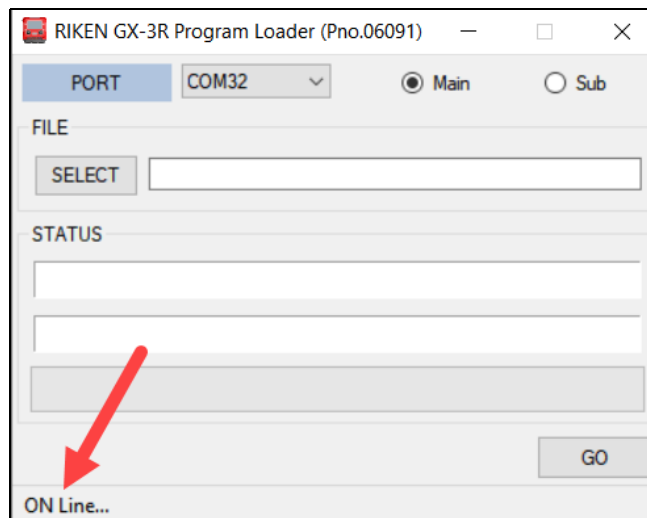


10. Click **Select**.

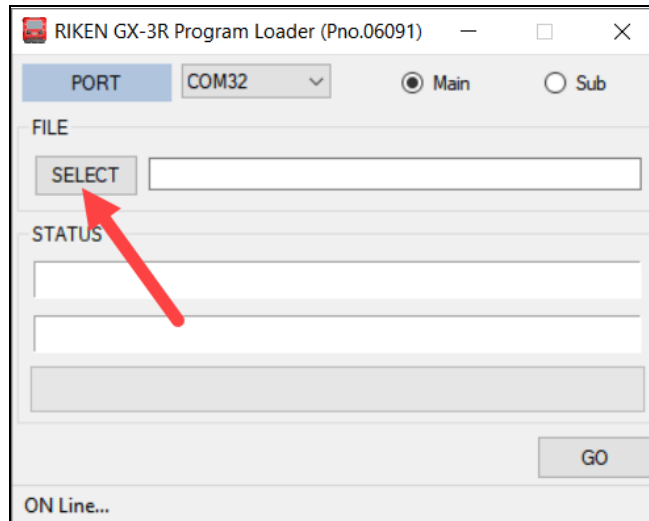


11. The firmware selection screen appears.

12. Navigate to the location of your saved .mot program file and select the program.

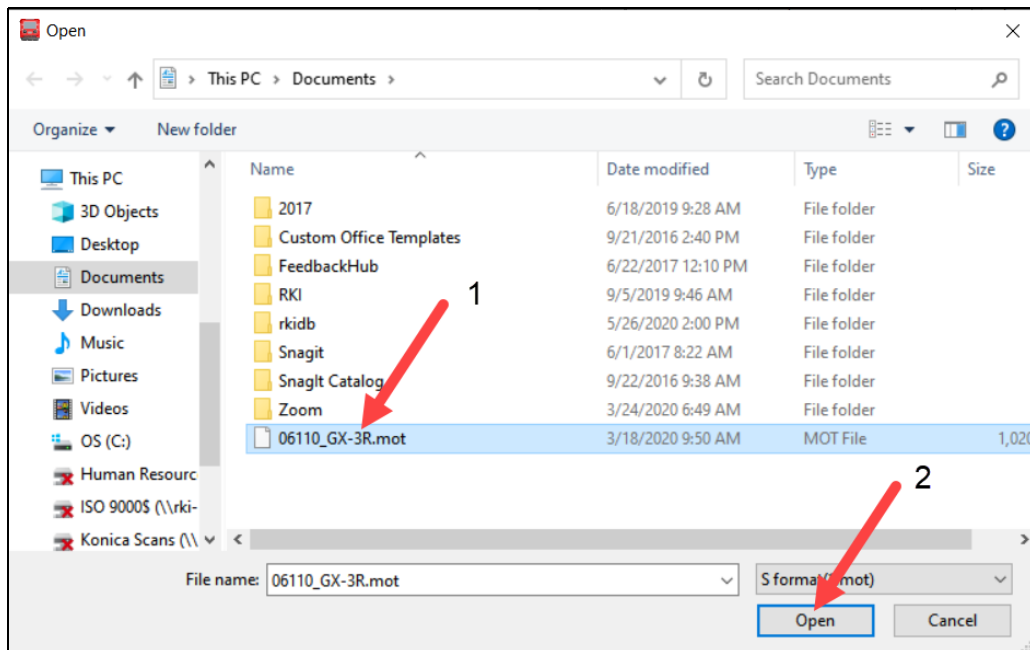


13. Click **Open**.


14. Click **Go**.

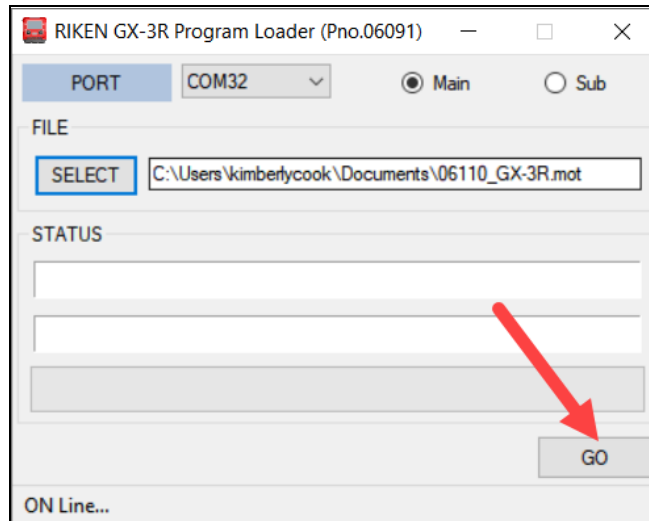

15. Reprogramming will begin. The GX-3R (Pro)'s screen will say **UP DATA**.

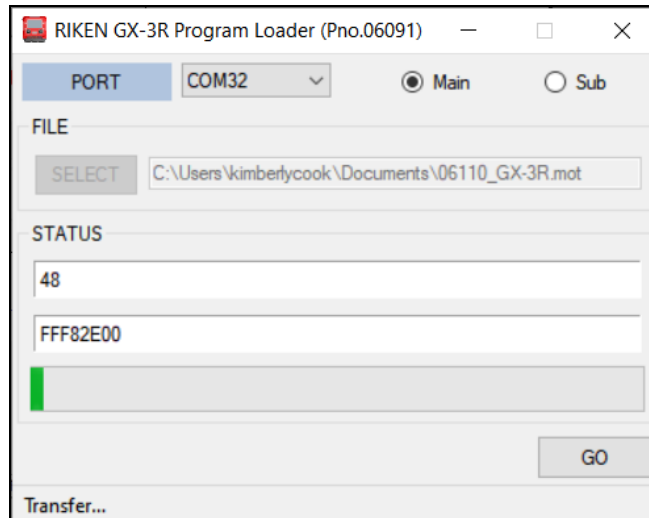

16. After approximately 3 minutes, the reprogramming will finish.

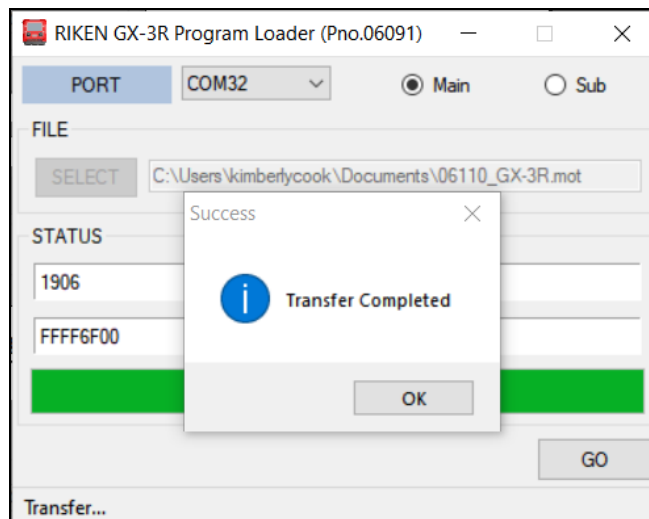

17. Click **OK**. The GX-3R (Pro) will be turned off.